

Model	System	DTC	Data List	Active Test	Special Func
A5 / Cowin 3	Engine	√	√	√	√
A5 / Cowin 3	AT	√	√	√	
A5 / Cowin 3	ABS	√	√	√	
A5 / Cowin 3	SRS	√	√	√	
A5 / Cowin 3	Dashboard	√	√	√	√
A5 / Cowin 3	IMM	√	√		√
A5 / Cowin 3	BODY	√	√		√
A3	Engine	√	√	√	√
A3	AT	√	√	√	√
A3	ABS	√	√	√	
A3	SRS	√	√		
A3	Dashboard	√	√	√	√
A3	IMM	√	√		√
A3	BODY	√	√	√	√
A3	EPS	√	√		√
A3	A/C	√	√		
A3	Steering Angle				√
A3	TPMS	√	√		√
Fulwin 2	Engine	√	√	√	√
Fulwin 2	AT	√	√	√	√
Fulwin 2	ABS	√	√	√	
Fulwin 2	SRS	√	√		
Fulwin 2	Dashboard	√	√	√	√
Fulwin 2	IMM	√	√		√
Fulwin 2	BODY	√	√	√	√
Tiggo 3	Engine	√	√	√	√
Tiggo 3	AT	√	√	√	√
Tiggo 3	ABS	√	√	√	
Tiggo 3	SRS	√	√		
Tiggo 3	Dashboard	√	√	√	√
Tiggo 3	IMM	√	√		√
Tiggo 3	BODY	√	√	√	√
Tiggo 3	Steering Angle	√	√		√
Tiggo 3	TPMS	√	√		√
Tiggo 3	BODY	√	√		√
Tiggo 3	Intelligent Torque Management	√			
Tiggo 3	Intelligent Switch Unit				√
QQ3	Engine	√	√	√	√
QQ3	AT	√	√	√	√

QQ3	ABS	√	√	√	
QQ3	SRS	√	√		
QQ6 / Cowin 1	Engine	√	√	√	√
QQ6 / Cowin 1	AT	√	√	√	√
QQ6 / Cowin 1	ABS	√	√	√	
QQ6 / Cowin 1	SRS	√	√		
QQ6 / Cowin 1	Dashboard	√	√	√	√
QQ6 / Cowin 1	IMM	√	√		√
QQ6 / Cowin 1	BODY	√	√	√	√
QQme	Engine	√	√	√	√
QQme	AT	√	√	√	√
QQme	ABS	√	√	√	
QQme	SRS	√	√		
QQme	Dashboard	√	√	√	√
QQme	IMM	√	√		√
QQme	BODY	√	√	√	√
Eastar / Cowin 5	Engine	√	√	√	√
Eastar / Cowin 5	AT	√	√	√	√
Eastar / Cowin 5	ABS	√	√	√	
Eastar / Cowin 5	SRS	√	√		
Eastar / Cowin 5	Dashboard	√	√	√	√
Eastar / Cowin 5	IMM	√	√		√
Eastar / Cowin 5	BODY	√	√	√	√
Eastar / Cowin 5	Intelligent Switch Unit	√	√	√	√
A1	Engine	√	√	√	√
A1	AT	√	√	√	√
A1	ABS	√	√	√	
A1	SRS	√	√		
A1	Dashboard	√	√	√	√
A1	IMM	√	√		√
A1	BODY	√	√	√	√
Fulwin	Engine	√	√	√	
Fulwin	ABS	√	√	√	
Fulwin	SRS	√	√		
Cowin / Cowin 2	Engine	√	√	√	√
Cowin / Cowin 2	ABS	√	√	√	
Cowin / Cowin 2	SRS	√	√		
Cowin / Cowin 2	IMM	√	√		√
Cowin / Cowin 2	Intelligent Switch Unit		√	√	√
New Eastar	Engine	√	√	√	
New Eastar	AT	√	√	√	√
New Eastar	ABS	√	√	√	√
New Eastar	SRS	√	√		
New Eastar	Dashboard	√	√	√	√

New Eastar	IMM	√	√		√
New Eastar	BODY	√	√	√	√
New Eastar	Headlight adjustment control	√			√
New Eastar	TPMS	√	√		√
New Eastar	EPS	√	√	√	√
E5	Engine	√	√	√	
E5	AT	√	√	√	√
E5	ABS	√	√	√	√
E5	SRS	√	√		
E5	Dashboard	√	√	√	√
E5	IMM	√	√		√
E5	BODY	√	√	√	√
E5	A21 FLC PEPS	√	√		√
S15	Engine	√	√		√
S15	ABS	√	√	√	√
S15	SRS	√	√		
S15	Dashboard	√	√	√	√
S15	BODY	√	√		√
A19	BODY	√	√	√	√
A19	ABS	√	√		√
A19	Dashboard	√	√	√	√
A19	TPMS	√	√	√	
A19	Window anti-pinch system	√	√		√
M1	Engine	√	√	√	√
M1	AT	√	√	√	√
M1	ABS	√	√	√	√
M1	SRS	√	√		
M1	Dashboard	√	√	√	√
M1	BODY	√	√		√
M2	Engine	√	√	√	√
M2	AT	√	√	√	√
M2	ABS	√	√	√	√
M2	SRS	√	√		
M2	Dashboard	√	√	√	√
M2	BODY	√	√		√
M3	Engine	√	√	√	√
M3	AT	√	√	√	√
M3	ABS	√	√	√	√
M3	SRS	√	√		
M3	Dashboard	√	√	√	√
M3	BODY	√	√		√
M5	Engine	√	√	√	√
M5	AT	√	√	√	√
M5	ABS	√	√	√	√

M5	SRS	√	√		
M5	Dashboard	√	√	√	√
M5	BODY	√	√		√
M5	IMM	√	√		√
√1	Engine	√	√	√	√
√1	AT	√	√	√	√
√1	ABS	√	√	√	√
√1	SRS	√	√		
√1	Dashboard	√	√	√	√
√1	BODY	√	√		√
√1	IMM	√	√		√
G5	Engine	√	√	√	
G5	AT	√	√	√	
G5	ABS	√	√	√	√
G5	SRS	√	√		√
G5	Dashboard	√	√		
G5	IMM	√	√		√
G5	BODY	√	√	√	√
G5	DOOR	√	√	√	√
G5	Trunk Control Module	√	√	√	√
G5	Steering Angle				√