

Note:

√ Functions marked with √ is fully supported and already existed in former software version.

Number Index number of the special function , you can find the name from the special function table.

Special Function Table

0001	Configuration Read/Write[CF001 Central Gateway]	0072	Erase[RZ001 Computer Reset]
0002	Configuration Read/Write[CF001 Svt Configuration]	0073	Erase[RZ001 Fault Memory]
0004	Configuration Read/Write[CF007 System Configuration]	0074	Erase[RZ002 Computer Reinitialisation]
0009	Configuration Read/Write[CF016 Country Model]	0075	Erase[RZ002 Computer Reset]
0010	Configuration Read/Write[CF019 Adac Display Type]	0076	Erase[RZ002 Ecu Memory]
0011	Configuration Read/Write[CF020 Front Left-Hand Inertia Wheel]	0080	Erase[RZ003 Fault Memory]
0012	Configuration Read/Write[CF021 Front Left-Hand Inertia Wheel]	0083	Erase[RZ004 Emergency Call Service]
0015	Configuration Read/Write[CF027 Language]	0084	Erase[RZ004 Fault Memory]
0018	Configuration Read/Write[CF033 Column Steering Lock]	0087	Erase[RZ005 Auto-Adaptives]
0020	Configuration Read/Write[CF036 Pass Airbag Deactivation Warning Light]	0088	Erase[RZ005 Computer Reset]
0024	Configuration Read/Write[CF048 Seat Belt Reminder Buzzer]	0089	Erase[RZ005 Fault Memory]
0025	Configuration Read/Write[CF049 Seat Belt Light]	0091	Erase[RZ007 Fault Memory]
0029	Configuration Read/Write[CF053 Rear Loud Speaker]	0179	Other Configurations[VP002 System Initialisation]
0030	Configuration Read/Write[CF066 Guidelines]	0182	Other Configurations[VP003 Write Date Of After Sales Operation]
0032	Configuration Read/Write[CF125 Language Version.]	0186	Other Configurations[VP004 Vehicle Parameters]
0034	Configuration Read/Write[CF136 Tyre Pressure Units]	0187	Other Configurations[VP005 Geographical Zone]
0035	Configuration Read/Write[CF140 Distance Units]	0188	Other Configurations[VP005 Write Date Of After Sales Operation]
0036	Configuration Read/Write[CF141 Overspeed Function - Arabia]	0189	Other Configurations[VP006 Air Recirculation Flap Motor]
0037	Configuration Read/Write[CF143 Consumption Measurement Units]	0190	Other Configurations[VP006 Lock Computer]
0042	Configuration Read/Write[CF167 Flashing Buzzer]	0192	Other Configurations[VP006 Write Date Of Last After Sales Operation]
0046	Configuration Read/Write[CF199 Computer Initialisation]	0195	Other Configurations[VP007 Speedo Index]
0047	Configuration Read/Write[CF209 Driver'S Front Airbag]	0196	Other Configurations[VP007 Unlock Computer]
0048	Configuration Read/Write[CF210 Passenger'S Front Airbag]	0198	Other Configurations[VP009 Write Date Of Last After Sales Operation]

DOKKER - KANGOO	Airbag / Pretensioners(SRS)	√	√	√	√		√	0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
DOKKER - KANGOO	VARIABLE P.A.S.	√	√	√	√			0073, 0188
DOKKER - KANGOO	RADIO	√	√	√	√		√	0009, 0080, 0182, 0030, 0089, 0015, 0029, 0009
DOKKER - KANGOO	Telematic CTRL Unit	√	√	√	√		√	0072, 0080, 0083, 0206, 0209, 0210
DOKKER - KANGOO	Urea Dosing Control Module	√	√	√	√	√	√	0084, 0092, 0226, 0227, 0228, 0229, 0230, 0231
DOKKER - KANGOO	Hands - Fress Module	√	√	√	√	√	√	0018, 0073
DOKKER - KANGOO	Multimedia Interface	√	√	√	√		√	0073
DUSTER	Injection	√	√	√	√	√	√	0091 , 0114
DUSTER	Automatic Gearbox(AT)	√	√	√	√		√	0084, 0087, 0198, 0203, 0207
DUSTER	4 Wheels Drive(4WD)	√	√	√	√	√	√	0003, 0073, 0183, 0194, 0178
DUSTER	Anti-lock Brake System(ABS)	√	√	√	√		√	0192, 0195, 0186, 0073
DUSTER	UCH	√	√	√	√		√	0073,0042
DUSTER	Airbag / Pretensioners(SRS)	√	√	√	√			0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
DUSTER	VARIABLE P.A.S.	√	√	√	√			0188, 0073
DUSTER	Tracker	√	√	√	√			0002, 0071, 0073
DUSTER ph2	Injection	√	√	√	√	√	√	0091 , 0114
DUSTER ph2	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0192, 0195, 0186, 0073
DUSTER ph2	Instrument Panel	√	√	√	√		√	0010, 0032, 0034, 0035, 0036, 0037, 0046, 0073
DUSTER ph2	UCH	√	√	√	√	√	√	0073,0042
DUSTER ph2	Airbag / Pretensioners(SRS)	√	√	√	√		√	0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
DUSTER ph2	Air Conditioning(AC)	√	√	√	√		√	0073, 0074, 0187
DUSTER ph2	Automatic Gearbox(AT)	√	√	√	√	√	√	0084, 0087, 0198, 0203, 0207
DUSTER ph2	VARIABLE P.A.S.	√	√	√	√			0073, 0188
DUSTER ph2	4 Wheels Drive(4WD)	√	√	√	√	√	√	0003, 0073, 0183, 0194, 0178
DUSTER ph2	RADIO	√	√	√	√		√	0009, 0080, 0182, 0030, 0089, 0015, 0029, 0009
DUSTER ph2	Telematic CTRL Unit	√	√	√	√		√	0072, 0080, 0083, 0206, 0209, 0210
DUSTER ph2	Hands - Fress Module	√	√	√	√	√	√	0018, 0073
DUSTER ph2	Multimedia Interface	√	√	√	√		√	0073
DUSTER ph3	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0192, 0195, 0186, 0073
DUSTER ph3	Instrument Panel	√	√	√	√	√	√	0010, 0032, 0034, 0035, 0036, 0037, 0046, 0073
DUSTER ph3	UCH	√	√	√	√	√	√	0073,0042

DUSTER ph3	Airbag / Pretensioners(SRS)	√	√	√	√		√	0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
DUSTER ph3	Air Conditioning(AC)	√	√	√	√		√	0073, 0074, 0187
DUSTER ph3	Automatic Gearbox(AT)	√	√	√	√	√	√	0084, 0087, 0198, 0203, 0207
DUSTER ph3	Communications Unit	√	√	√	√	√	√	0084, 0076, 0088
DUSTER ph3	Blind Spot Detection	√	√	√	√		√	0073
DUSTER ph3	VARIABLE P.A.S.	√	√	√	√	√		0073, 0188
DUSTER ph3	UPC	√	√	√	√		√	0073,0042
DUSTER ph3	4 Wheels Drive(4WD)	√	√	√	√	√	√	
DUSTER ph3	RADIO	√	√	√	√		√	0009, 0080, 0182, 0030, 0089, 0015, 0029, 0009
DUSTER ph3	Telematic CTRL Unit	√	√	√	√			0072, 0080, 0083, 0206, 0209, 0210
DUSTER ph3	Urea Dosing Control Module	√	√	√	√	√	√	0092, 0229, 0228, 0230, 0231, 0084, 0227, 0226
DUSTER ph3	Hands - Fress Module	√	√	√	√	√	√	0018, 0073
DUSTER ph3	Around View Monitoring	√	√	√	√		√	0073, 0075
DUSTER ph3	Central GateWay	√	√	√	√	√		0001, 0073
DUSTER ph3	Multimedia Interface	√	√	√	√		√	0073
LODGY	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0192, 0195, 0186, 0073
LODGY	Instrument Panel	√	√	√	√		√	0010, 0032, 0034, 0035, 0036, 0037, 0046, 0073
LODGY	UCH	√	√	√	√	√	√	0073,0042
LODGY	Airbag / Pretensioners(SRS)	√	√	√	√		√	0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
LODGY	Automatic Gearbox(AT)	√	√	√	√	√	√	0084, 0087, 0198, 0203, 0207
LODGY	VARIABLE P.A.S.	√	√	√	√			0073, 0188
LODGY	RADIO	√	√	√	√		√	0009, 0080, 0182, 0030, 0089, 0015, 0029, 0009
LODGY	Urea Dosing Control Module	√	√	√	√	√	√	0084, 0092, 0226, 0227, 0228, 0229, 0230, 0231
LODGY	Hands - Fress Module	√	√	√	√	√	√	0018, 0073
LODGY	Multimedia Interface	√	√	√	√		√	0073
LOGAN	Injection	√	√	√	√	√	√	0091 , 0114
LOGAN	Automatic Gearbox(AT)	√	√	√	√		√	0207, 0087, 0198, 0084, 0203
LOGAN	Anti-lock Brake System(ABS)	√	√	√	√		√	0192, 0195, 0186, 0073
LOGAN	UCH	√	√	√	√		√	0073,0042
LOGAN	Airbag / Pretensioners(SRS)	√	√	√	√			0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
LOGAN	Engine(petrol)	√	√	√	√		√	0073
LOGAN	VARIABLE P.A.S.	√	√	√	√		√	0073, 0188
LOGAN	Tracker	√	√	√	√			0002, 0071, 0073
LOGAN II - SANDERO II	Injection	√	√	√	√	√	√	0091 , 0114

LOGAN II - SANDERO II	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0192, 0195, 0186, 0073
LOGAN II - SANDERO II	Instrument Panel	√	√	√	√		√	0010, 0032, 0034, 0035, 0036, 0037, 0046, 0073
LOGAN II - SANDERO II	UCH	√	√	√	√	√	√	0073,0042
LOGAN II - SANDERO II	Airbag / Pretensioners(SRS)	√	√	√	√		√	0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
LOGAN II - SANDERO II	Air Conditioning(AC)	√	√	√	√		√	0073, 0074, 0187
LOGAN II - SANDERO II	Automatic Gearbox(AT)	√	√	√	√	√	√	0084, 0087, 0198, 0203, 0207
LOGAN II - SANDERO II	VARIABLE P.A.S.	√	√	√	√			0073, 0188
LOGAN II - SANDERO II	UPC	√	√	√	√		√	0073,0042
LOGAN II - SANDERO II	Telematic CTRL Unit	√	√	√	√		√	0072, 0080, 0083, 0206, 0209, 0210
LOGAN II - SANDERO II	Urea Dosing Control Module	√	√	√	√	√	√	0084, 0092, 0226, 0227, 0228, 0229, 0230, 0231
LOGAN II - SANDERO II	Hands - Fress Module	√	√	√	√	√	√	0018, 0073
LOGAN II - SANDERO II	Multimedia Interface	√	√	√	√		√	0073
LOGAN II - SANDERO II	Tracker	√	√	√	√			0002, 0071, 0073
SANDERO	Injection	√	√	√	√	√	√	0091 , 0114
SANDERO	Automatic Gearbox(AT)	√	√	√	√		√	0084, 0087, 0198, 0203, 0207
SANDERO	RADIO	√	√	√	√		√	0009, 0080, 0182, 0030, 0089, 0015, 0029, 0009
SANDERO	Anti-lock Brake System(ABS)	√	√	√	√		√	0192, 0195, 0186, 0073
SANDERO	UCH	√	√	√	√		√	0073,0042
SANDERO	Airbag / Pretensioners(SRS)	√	√	√	√			0190, 0050, 0060, 0051, 0073, 0054, 0065, 0020, 0064, 0196, 0073, 0190, 0012, 0011, 0066, 0025, 0047, 0058, 0024, 0057, 0049, 0048
SANDERO	Engine(petrol)	√	√	√	√		√	0073
SANDERO	VARIABLE P.A.S.	√	√	√	√		√	0073, 0188
SANDERO	Tracker	√	√	√	√			0002, 0071, 0073