

Brand	Area	Model	Engine	Year	System	Function
HYUNDAI					read security code	Password calculator
HYUNDAI					read security code	Read 46 chip security code
HYUNDAI	China	Accent(MC)		2005-	Immobiliser	1. Read live data 2. Program keys 3. ECM neutral mode 4. Smartra neutral mode
HYUNDAI	China	Leadong		2016-	Immobiliser	1. Program keys 2. ECM neutral mode 3. Number of keys read
HYUNDAI	China	Leadong		2016-	Remote control system	1. Remote control matching
HYUNDAI	China	Leadong		2016-	Smart key system	1. Program smart keys 2. ECM neutral 3. SMK neutral 4. ESCL neutral
HYUNDAI	China	Elantra(MDC)	Type 1	2012-	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	China	Elantra(MDC)	Type 2	2012-	Immobiliser	1. Program keys 2. ECM neutral mode 3. Number of keys read
HYUNDAI	China	Elantra(MDC)			Remote control system	1. Remote control matching
HYUNDAI	China	Elantra(MDC)			Smart key system	1. live data 2. program smart key 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	China	Elantra(HDC)		2008-2010	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM
HYUNDAI	China	Elantra(HDC)		2008-2010	Remote control system	1. Remote control matching
HYUNDAI	China	Elantra(HDC)		2011-2018	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM
HYUNDAI	China	Elantra(HDC)		2011-2018	Remote control system	1. Remote control matching
HYUNDAI	China	Elantra(HDC)		2011-2018	Smart key system	1. live data 2. program smart key 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral

HYUNDAI	China	Elantra(HDC EV)		2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Elantra(HDC EV)		2017	Remote control system	1.Remote control matching
HYUNDAI	China	Elantra(HDC EV)		2017	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	China	New Elantra(ID)		2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	New Elantra((ID))		2017	Remote control system	1.Remote control matching
HYUNDAI	China	New Elantra((ID))		2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	Elantra		2004-2017	Remote control system	1.Remote control matching
HYUNDAI	China	i30(FDC)		2009-2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM
HYUNDAI	China	i30(FDC)		2009-2013	Remote control system	1.Remote control matching
	China	ix25(GC)		2014-	Remote control system	1.Remote control matching
HYUNDAI	China	ix25(GC)		2014-	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	ix25(GC)		2014-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	ix35(LMC)		2010-2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	China	ix35(LMC)		2010-2013	Remote control system	1.Remote control matching
HYUNDAI	China	ix35(LMC)		2010-2013	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	China	ix35(LMC)		2014-2017	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	China	ix35(LMC)		2014-2017	Remote control system	1.Remote control matching

HYUNDAI	China	ix35(LMC)		2014-2017	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	China	ix35(NU)		2017-	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	ix35(NU)		2017-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	Mistra(CF)		2014-	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Mistra(CF)		2014-	Remote control system	1.Remote control matching
HYUNDAI	China	Mistra(CF)		2014-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	All New Santafe(DMC)		2012-	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	All New Santafe(DMC)		2012-	Remote control system	1.Remote control matching
HYUNDAI	China	All New Santafe(DMC)		2012-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	Sonata(LFC)		2015-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Sonata(LFC)		2015-2017	Remote control system	1.Remote control matching
HYUNDAI	China	Sonata(LFC)		2015-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	Sonata 8(YFC)		2011-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	China	Sonata 8(YFC)		2011-2016	Remote control system	1.Remote control matching
HYUNDAI	China	Sonata 8(YFC)		2011-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	China	Sonata 9		2015-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral

HYUNDAI	China	Sonata(NFC)		2009-2010	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM
HYUNDAI	China	Sonata(NFC)		2009-2010	Remote control system	1.Remote control matching
HYUNDAI	China	Sonata(NFC)		2009-2010	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	China	Sonata(NF)		2004-2008	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Sonata(NFC)		2009-2010	Remote control system	1.Remote control matching
HYUNDAI	China	Tucson(JM)	Petrol 2.0	2005-2016	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Tucson(JM)	Petrol 2.7	2005-2016	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Tucson(JM)	Diesel	2005-2016	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Tucson(JM)		2005-2016	Remote control system	1.Remote control matching
HYUNDAI	China	New Tucson		2015-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	New Tucson		2015-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	China	New Tucson		2015-2017	Remote control system	1.Remote control matching
HYUNDAI	China	Verna(RBC/CB)		2017-	Immobiliser	1.Program keys 2.ECM neutral 3.Read key number
HYUNDAI	China	Verna(RBC/CB)		2017-	Remote control system	1.Remote control matching
HYUNDAI	China	Verna(RBC/CB)		2014-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	China	Verna(RBC/CB)		2014-2016	Remote control system	1.Remote control matching
HYUNDAI	China	Verna(RBC/CB)		2014-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral

HYUNDAI	China	Verna(RBC/CB)		2010-2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	China	Verna(RBC/CB)		2010-2013	Remote control system	1.Remote control matching
HYUNDAI	China	Verna(YC)		2016-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	China	Verna(YC)		2016-2017	Remote control system	1.Remote control matching
HYUNDAI	General	Accent(HC)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Accent(HC)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Accent(HCI)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Accent(HCI)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Accent(LC)		2000-2002	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Accent(LC)		2003-2007	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Accent(MC)		2006-2011	Immobiliser	1.Live data 2.Program keys 3.ECM neutral 4.Smartra neutral
HYUNDAI	General	Accent(RB)		2011-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Accent(RB)		2018-	Remote control system	1.Remote control matching
HYUNDAI	General	Accent(RB)		2011-2018	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Accent/Solaris(HCR)		2018-	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Accent/Solaris(HCR)		2018-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral

HYUNDAI	General	Accent/Solaris(RBr)		2011-2017	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Accent/Solaris(RBr)		2011-2017	Remote control system	1.Remote control matching
HYUNDAI	General	Accent/Solaris(RBr)		2011-2015	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Accent(X3)		1995-1999	Immobiliser	1. Change password 2. Add key 3. Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Atos/Prime(MXI)-PDF		2003-2013	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Atos/Prime(MXL)		2000-2004	Immobiliser	1.Change passord 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Atos/Prime(MX)		1998-2004	Immobiliser	1.Change passord 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	CRETA(GS)		2015-2018	Remote control system	1.Remote control matching
HYUNDAI	General	CRETA(GSB)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	CRETA(GSB)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	CRETA(GSR)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	CRETA(GSR)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
	General	Elantra Coupe(JK)		2013-2016	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra Coupe(JK)		2013-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral

HYUNDAI	General	Elantra Coupe(JK)		2013-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
	General	Elantra(AD)		2016-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra(AD)		2016-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Elantra(AD)		2016-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Elantra(ADA)		2017-	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Elantra(ADA)		2017-	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
	General	Elantra(ADA)		2017-	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra(HD)		2007-2011	Immobiliser(Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Elantra(HD)		2007-2011	Immobiliser(Diesel)	1.Read live data 2.Program keys 3.ECM neutral 4.Smartra neutral
HYUNDAI	General	Elantra(HD)		2007-2011	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra(MD)		2012-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Elantra(MD)		2012-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Elantra(MD)		2012-2016	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra(MDI)		2013-2016	Immobiliser	1. Read live data 2. Program keys 3.Engine ECM neutral 4.Security machine ECM neutral

HYUNDAI	General	Elantra(MDI)		2013-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Elantra(MDI)		2013-2016	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra(RD)		1996-2000	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Elantra(UD)		2014-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM
HYUNDAI	General	Elantra(UD)		2014-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Elantra(UD)		2014-2016	Remote control system	1.Remote control matching
HYUNDAI	General	Elantra(XD)		2001-2006	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Eon(HA)		2012-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Eon(HA)		2012-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Equus/Centennial(VI)		2014-2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Equus/Centennial(VI)		2010-2013	Smart key system	1.Progarm smart keys
HYUNDAI	General	Equus/Centennial(LZ)		1999-2008	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	G70(IK)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	G90(HI)		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral

HYUNDAI	General	Golep II (M1)		1997-2003	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Genesis Coupe(BK)		2009-2017	Immobiliser	1. Read live data 2. Program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Genesis Coupe(BK)		2009-2017	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Genesis Coupe(BK)		2009-2017	Remote control system	1.Remote control matching
HYUNDAI	General	Genesis Coupe(BK)-U.S.		2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM
HYUNDAI	General	Genesis Coupe(BK)-U.S.		2013	Remote control system	1.Remote control matching
HYUNDAI	General	Genesis(BH)		2013-2014	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Genesis(BH)		2013-2014	Smart key system	1.Program smart keys
HYUNDAI	General	Genesis(BH)		2013-2014	Remote control system	1.Remote control matching
HYUNDAI	General	Genesis(BH)		2009-2012	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Genesis(BH)		2009-2012	Remote control system	1.Remote control matching
HYUNDAI	General	Genesis(BH)		2009-2012	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Genesis(BH)-U.S.		2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM
HYUNDAI	General	Genesis(BH US)-U.S.		2013	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral

HYUNDAI	General	Genesis(BH US)-U.S.		2013	Remote control system	1.Remote control matching
HYUNDAI	General	Genesis(DH)		2014-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Getz(TB)		2005-2011	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Getz(TB)		2003-2005	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Grand i10/Xcent(BA)		2014-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Grand i10/Xcent(BA)		2014-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Grand i10/Xcent(BA)		2014-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Grand Santafe(NC)		2014-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Grand Santafe(NC)		2014-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Grand Santafe(NC)		2014-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Grandeur/Azera(HG)		2012-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Grandeur/Azera(HG)		2012-2017	Remote control system	1.Remote control matching
HYUNDAI	General	Grandeur/Azera(HG)	With steering column lock	2012-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Grandeur/Azera(HG)	Without steering column lock	2012-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Grandeur/Azera(IG)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 5.ESCL neutral

HYUNDAI	General	Grandeur/Azera(TG)	Type 1	2007-2011	Immobiliser (Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Grandeur/Azera(TG)	Type 2	2007-2011	Immobiliser (Petrol)	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Grandeur/Azera(TG)		2007-2011	Immobiliser (Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM
HYUNDAI	General	Grandeur/Azera(TG)		2007-2011	Remote control system	1.Remote control matching
HYUNDAI	General	Grandeur/Azera(TG)		2006	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Grandeur/Azera(TG)		2006	Remote control system	1.Remote control matching
HYUNDAI	General	H-BUS(TQ)		2008-2013	Immobiliser(Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	H-BUS(TQ)	G 2.5 TCI-A2	2008-2013	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	H-BUS(TQ)	G 2.5 TCI-4D56	2008-2013	Immobiliser(Diesel)	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	H-1/iMAX/iLOAD(TQ)		2008-2018	Immobiliser(Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	H-2/iMAX/iLOAD(TQ)	G 2.5 TCI-A2	2008-2018	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	H-3/iMAX/iLOAD(TQ)	G 2.5 TCI-4D56	2008-2018	Immobiliser(Diesel)	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	H-4/iMAX/iLOAD(TQ)		2008-2018	Remote control system	1.Remote control matching
HYUNDAI	General	H-100 Truck(HR)		2013-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral

HYUNDAI	General	Huiyi(A1)		1997-2009	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	HB20(HB)		2013-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	HB21(HB)		2013-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Coupe(RC)		1997-2001	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	i10(IA)		2014-2018	Remote control system	1.Remote control matching
HYUNDAI	General	i10(IA)		2014-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i10(IA)		2014-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	i10(PA)		2008-2017	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i20(GB)		2015-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i20(GB)		2015-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	i20(GB)		2015-2018	Remote control system	1.Remote control matching
HYUNDAI	General	i20(IB)		2014-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i20(IB)		2014-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	i20(IB)		2014-2018	Remote control system	1.Remote control matching

HYUNDAI	General	i20(PB)		2009-2012	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i20(PB)		2009-2012	Remote control system	1.Remote control matching
HYUNDAI	General	i20(PB)		2013-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i20(PB)		2013-2016	Remote control system	1.Remote control matching
HYUNDAI	General	i20(PB)	Without steering column lock	2013-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	i20(PB)	With steering column lock	2013-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	i30(FDe)		2009-2012	Immobiliser(Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i31(FDe)	D 2.0 TCI-D	2009-2012	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i32(FDe)	D 1.6 TCI-U	2009-2012	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i33(FDe)	D 1.6 TCI-U2	2009-2012	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i33(FDe)		2009-2013	Remote control system	1.Remote control matching
HYUNDAI	General	i30(GD)		2013-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	i30(GD)		2013-2018	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	i30(GD)		2013-2018	Remote control system	1.Remote control matching

HYUNDAI	General	i30(GDe)		2013-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	i30(GDe)		2013-2017	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	i30(GDe)		2013-2017	Remote control system	1.Remote control matching
HYUNDAI	General	i30(PD)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	i30(PD)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	i30(PDE)		2017-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	i30(PDE)		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	i30N(PDEN)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	i30N(PDEN)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	i30/Elantra Neos(FD)		2008-2012	Immobiliser(Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i30/Elantra Neos(FD)	D 2.0 TCI-D	2008-2012	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i30/Elantra Neos(FD)	D 1.6 TCI-U	2008-2012	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i30/Elantra Neos(FD)	D 1.6 TCI-U2	2008-2012	Immobiliser(Diesel)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	i30/Elantra Neos(FD)		2008-2012	Remote control system	1.Remote control matching
HYUNDAI	General	i40(VF)		2012-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read

HYUNDAI	General	i40(VF)		2012-2018	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	i40(VF)		2012-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Ioniq electric(AE EV)		2017-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Ioniq electric(AE EV)		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Ioniq hybrid(AE HEV)		2017-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Ioniq hybrid(AE HEV)		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Ioniq PHEV		2017-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Ioniq PHEV		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	ix20(JC)		2011-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3. Number of keys read
HYUNDAI	General	ix20(JC)		2011-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	ix20(JC)		2011-2018	Remote control system	1.Remote control matching
HYUNDAI	General	ix35 FCEV(LM FCEV)		2013-2018	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	ix35(EL)		2014-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	ix35(EL)		2014-2016	Remote control system	1.Remote control matching

HYUNDAI	General	ix35(EL)		2014-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	ix35(EL)		2010-2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	ix35(EL)		2010-2013	Remote control system	1.Remote control matching
HYUNDAI	General	ix35(EL)		2010-2013	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Kona(OS)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Kona(OS)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Matrix(FC)		2002-2011	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	SANTAFE SPORT(DMA)		2014-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	SANTAFE SPORT(DMA)		2014-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	SANTAFE SPORT(DMA)		2014-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Santafe(CM)		2010-2013	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Santafe(CM)		2010-2013	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Santafe(CM)		2010-2013	Remote control system	1.Remote control matching
HYUNDAI	General	Santafe(CM)		2006-2009	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral

HYUNDAI	General	Santafe(CM)		2006-2009	Remote control system	1.Remote control matching
HYUNDAI	General	Santafe(DM)		2013-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Santafe(DM)		2013-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Santafe(DM)		2013-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Santafe(DMI)		2014-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Santafe(DMI)		2014-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Santafe(DMI)		2014-2017	Remote control system	1.Remote control matching
HYUNDAI	General	SANTAFE(SM)		2001-2006	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Santamo(M2)		1997-2003	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 6. Anti theft reset
HYUNDAI	General	Sonata Hybrid(LF HEV)		2015-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Sonata Hybrid(LF HEV)-U.S.		2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Sonata Hybrid(YF HEV)		2014-2015	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Sonata Hybrid(YF HEV)		2014-2015	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata Hybrid(YF HEV)		2014-2015	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Sonata Hybrid(YF HEV)-U.S.		2013-2014	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata Hybrid(YF HEV)-U.S.		2013-2014	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral

HYUNDAI	General	Sonata(EF)		1999-2005	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Sonata(EF)		2005-2006	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	General	Sonata(LF)	G 2.4/2.0 MPI	2015-2018	Immobiliser	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	General	Sonata(LF)	G 2.4/2.0 GDI	2015-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Sonata(LF)		2015-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata(LF)		2015-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Sonata(LFA)		2015-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Sonata(LFA)		2015-2018	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata(LFA)		2015-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Sonata(NF)	Type 1	2007-2010	Immobiliser(Petrol)	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Sonata(NF)	Type 2	2007-2010	Immobiliser(Petrol)	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	General	Sonata(NF)		2007-2010	Immobiliser(Diesel)	1. Read live data 2. program keys 3. ECM neutral 4.Smartra neutral mode
HYUNDAI	General	Sonata(NF)		2007-2010	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata(NF)		2005-2006	Immobiliser(Petrol)	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	General	Sonata(NF)		2005-2006	Immobiliser(Diesel)	1. Read live data 2. program keys 3. ECM neutral 4.Smartra neutral mode
HYUNDAI	General	Sonata(NF)		2005-2006	Remote control system	1.Remote control matching

HYUNDAI	General	Sonata(Y3)		1994-1998	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Sonata(YF)-US		2011-2014	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Sonata(YF)-US		2011-2014	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata(YF)-US		2011-2014	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Sonata(YFI)		2012-2015	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Sonata(YFI)		2012-2015	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata(YFI)		2012-2015	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	Sonata/i45(YF)		2011-2015	Immobiliser	1.Live data 2.Program keys 3.ECM neutral 4.Smartra neutral mode
HYUNDAI	General	Sonata/i45(YF)		2011-2015	Remote control system	1.Remote control matching
HYUNDAI	General	Sonata/i45(YF)		2011-2015	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	General	TERRACAN		2001-2006	Immobiliser	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	Terracan (HP)		2001-2006	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	TRAJET		1999-2007	Immobiliser	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	Trajet XG(FO)		1999-2007	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset

HYUNDAI	General	Tucson(JM FFV)	Type 1	2012-2013	Immobiliser	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	Tucson(JM FFV)	Type 2	2012-2013	Immobiliser	1. Read live data 2. program keys 3. ECM neutral 4.Smartra neutral mode
HYUNDAI	General	Tucson(JM)	G 2.0	2005-2010	Immobiliser(Petrol)	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	Tucson(JM)	G 2.7	2005-2010	Immobiliser(Petrol)	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	Tucson(JM)		2005-2010	Immobiliser(Diesel)	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	Tucson(JM)		2005-2010	Remote control system	1.Remote control matching
HYUNDAI	General	TUCSON(TL)		2016	Immobiliser	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	TUCSON(TL)		2016	Remote control system	1.Remote control matching
HYUNDAI	General	TUCSON(TL)		2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	TUCSON(TLE)		2016	Immobiliser	1.Program keys 2.ECM neutral 3.number of the keys read
HYUNDAI	General	TUCSON(TLE)		2016	Remote control system	1.Remote control matching
HYUNDAI	General	TUCSON(TLE)		2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	TUCSON(TLI)		2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	General	Tucson/i35(LM)		2014-2016	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	General	Tucson/i35(LM)		2014-2016	Remote control system	1.Remote control matching
HYUNDAI	General	Tucson/i36(LM)		2014-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral

HYUNDAI	General	Tucson/i37(LM)		2010-2013	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	General	Tucson/i37(LM)		2010-2013	Remote control system	1. Remote control matching
HYUNDAI	General	Tucson/i38(LM)		2010-2013	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	General	Grandeur (XG)		1999-2005	Immobiliser	1. Change password 2. Add key 3. Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	General	Veloster(FS)		2011-2016	Immobiliser	1. Program keys 2. ECM neutral 3. number of the keys read
HYUNDAI	General	Veloster(FS)		2011-2016	Remote control system	1. Remote control matching
HYUNDAI	General	Veloster(FS)		2011-2016	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	General	Veracruz/ix55(EN)		2007-2013	Immobiliser(Petrol)	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	General	Veracruz/ix55(EN)		2007-2013	Immobiliser(Diesel)	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	General	Veracruz/ix55(EN)		2007-2013	Remote control system	1. Remote control matching
HYUNDAI	General	Veracruz/ix55(EN)		2007-2013	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. MSL neutral
HYUNDAI	General	Verna(RBI)		2011-2017	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	General	Verna(RBI)		2011-2017	Remote control system	1. Remote control matching
HYUNDAI	General	Verna(RBI)		2011-2017	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral

HYUNDAI	USA	Accent(HC)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Accent(HC)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Accent(LC)		2003-2005	Immobiliser	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	USA	Accent(LC)		2000-2002	Immobiliser	1.Program keys 2.ECM neutral mode 5.Number of keys read
HYUNDAI	USA	Accent(MC)		2006-2011	Immobiliser	1.Live data 2.Program keys 3.ECM neutral 4.Smartra neutral mode
HYUNDAI	USA	Accent(RB)		2012-2017	Remote control system	1.Remote control matching
HYUNDAI	USA	Accent(RB)		2012-2017	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Accent(X3)		1995-1999	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	USA	Attitude(Mexico)		2006-2011	Immobiliser	1.Live data 2.Program keys 3.ECM neutral 4.Smartra neutral mode
HYUNDAI	USA	Azera(HG)		2012-2017	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Azera(HG)		2012-2017	Remote control system	1.Remote control matching
HYUNDAI	USA	Azera(HG)		2012-2017	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	USA	Azera(TG)	Type 1	2007-2011	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Azera(TG)	Type 2	2007-2011	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Azera(TG)		2007-2011	Remote control system	1.Remote control matching
HYUNDAI	USA	Azera(TG)		2006	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Azera(TG)		2006	Remote control system	1.Remote control matching

HYUNDAI	USA	Elantra Coupe(JK)		2013-2015	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Elantra Coupe(JK)		2013-2015	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra Coupe(JK)		2013-2015	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	USA	ElantraGT(GD)		2013-2016	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	ElantraGT(GD)		2013-2016	Remote control system	1. Remote control matching
HYUNDAI	USA	ElantraGT(GD)		2013-2016	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	USA	Elantra Touring(FD)		2009-2012	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Elantra Touring(FD)		2009-2012	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra(AD)		2017	Immobiliser	1. Program keys 2. ECM neutral 3. number of the keys read
HYUNDAI	USA	Elantra(AD)		2017	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra(AD)		2017	Smart key system	1. Program smart keys 2. ECM neutral 3. SMK neutral 4. ESCL neutral
HYUNDAI	USA	Elantra(ADA)		2017	Immobiliser	1. Program keys 2. ECM neutral 3. number of the keys read
HYUNDAI	USA	Elantra(ADA)		2017	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra(ADA)		2017	Smart key system	1. Program smart keys 2. ECM neutral 3. SMK neutral 4. ESCL neutral
HYUNDAI	USA	Elantra(HD)		2007-2010	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra(HD)		2007-2010	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral

HYUNDAI	USA	Elantra(MD)		2012-2016	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Elantra(MD)		2012-2016	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra(MD)		2012-2016	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	USA	Elantra(RD)		1996-2000	Immobiliser	1. Change password 2. Add key 3. Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	USA	Elantra(UD)		2011-2016	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Elantra(UD)		2011-2016	Remote control system	1. Remote control matching
HYUNDAI	USA	Elantra(UD)		2011-2016	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	USA	Elantra(XD)		2001-2006	Immobiliser	1. Program keys 2. ECM neutral 3. number of the keys read
HYUNDAI	USA	Entourage(EP)		2007-2010	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Entourage(EP)		2007-2010	Remote control system	1. Remote control matching
HYUNDAI	USA	Equus(VI)		2014-2016	Smart key system	1. Program smart keys 2. ECM neutral 3. SMK neutral 4. ESCL neutral
HYUNDAI	USA	Equus(VI)		2011-2013	Smart key system	1. Program smart keys
HYUNDAI	USA	G90(HI)		2017-2018	Smart key system	1. Program smart keys 2. ECM neutral 3. SMK neutral 4. ESCL neutral
HYUNDAI	USA	Genesis Coupe(BK)		2010-2016	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Genesis Coupe(BK)		2010-2016	Remote control system	1. Remote control matching

HYUNDAI	USA	Genesis Coupe(BK)		2010-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	USA	Genesis(BH)		2012-2014	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Genesis(BH)		2012-2014	Remote control system	1.Remote control matching
HYUNDAI	USA	Genesis(BH)		2012-2014	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	USA	Genesis(BH)		2009-2011	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Genesis(BH)		2009-2011	Remote control system	1.Remote control matching
HYUNDAI	USA	Genesis(BH)		2009-2011	Smart key system	1.Program smart keys
HYUNDAI	USA	Genesis(DH)		2015-2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Ioniq electric(AE EV)		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Ioniq hybrid(AE HEV)		2017-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Ioniq hybrid(AE HEV)		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Ioniq PHEV		2017-2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Ioniq PHEV		2017-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Kona(OS)		2018	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Kona(OS)		2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral

HYUNDAI	USA	SantafeSport(DMA)		2017	Immobiliser	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	USA	SantafeSport(DMA)		2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	SantafeSport(DMA)		2013-2016	Immobiliser	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	USA	SantafeSport(DMA)		2013-2016	Remote control system	1.Remote control matching
HYUNDAI	USA	SantafeSport(DMA)		2013-2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Santafe(CM)		2007-2012	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Santafe(CM)		2007-2012	Remote control system	1.Remote control matching
HYUNDAI	USA	Santafe(CM)		2012	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	USA	Santafe(NC)		2013-2018	Immobiliser	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	USA	Santafe(NC)		2013-2018	Remote control system	1.Remote control matching
HYUNDAI	USA	Santafe(NC)		2013-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Santafe(SM)		2006	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	USA	Sonata(EF)		1999-2005	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	USA	Sonata HEV(LF HEV)		2016	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Sonata Hybrid(YF HEV)		2011-2015	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Sonata Hybrid(YF HEV)		2011-2015	Remote control system	1.Remote control matching

HYUNDAI	USA	Sonata Hybrid(YF HEV)		2011-2015	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	USA	Sonata PHEV(LFP HEV)		2016-2017	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Sonata(LFA)	Type 1	2015-2018	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Sonata(LFA)	Type 2	2015-2018	Immobiliser	1.Program keys 2.ECM neutral mode 4.Number of keys read
HYUNDAI	USA	Sonata(LFA)		2015-2018	Remote control system	1.Remote control matching
HYUNDAI	USA	Sonata(LFA)		2015-2018	Smart key system	1.Program smart keys 2.ECM neutral 3.SMK neutral 4.ESCL neutral
HYUNDAI	USA	Sonata(NF)	Type 1	2006-2010	Smart key system	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Sonata(NF)	Type 2	2006-2010	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Sonata(NF)		2006-2010	Remote control system	1.Remote control
HYUNDAI	USA	Sonata(YF)		2011-2014	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	Sonata(YF)		2011-2014	Remote control system	1.Remote control
HYUNDAI	USA	Sonata(YF)		2011-2014	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral
HYUNDAI	USA	TIBURON(GK)	Type 1	2003-2008	Immobiliser	1. Read live data 2. program keys 3.Engine ECM neutral 4.Security machine ECM neutral
HYUNDAI	USA	TIBURON(GK)	Type 2	2003-2008	Immobiliser	1.Program keys 2.ECM neutral mode 3.Number of keys read
HYUNDAI	USA	Tiburon(RC)		1997-2001	Immobiliser	1.Change password 2.Add key 3.Clear the key 4. neutral mode 5. Anti theft reset
HYUNDAI	USA	TUCSON FCEV(LM FCEV)		2015-2016	Smart key system	1.Live data 2.Program smart keys 3.ECM neutral 4.SMK neutral 5.PDM neutral 6.ESCL neutral

HYUNDAI	USA	Tucson(LM)		2010-2015	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Tucson(LM)		2010-2015	Remote control system	1. Remote control matching
HYUNDAI	USA	Tucson(LM)		2010-2015	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	USA	Tucson(JM)	G 2.7	2005-2009	Immobiliser	1. Program keys 2. ECM neutral mode 4. Number of keys read
HYUNDAI	USA	Tucson(JM)	G 2.0	2005-2009	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Tucson(JM)		2005-2009	Remote control system	1. Remote control matching
HYUNDAI	USA	Tucson(TL)		2016	Remote control system	2. Remote control matching
HYUNDAI	USA	Tucson(TLI)			Smart key system	1. Program smart keys 2. ECM neutral 3. SMK neutral 4. ESCL neutral
HYUNDAI	USA	Veloster(FS)		2012-2018	Immobiliser	1. Program keys 2. ECM neutral mode 3. Number of keys read
HYUNDAI	USA	Veloster(FS)		2012-2018	Remote control system	2. Remote control matching
HYUNDAI	USA	Veloster(FS)		2012-2018	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. PDM neutral 6. ESCL neutral
HYUNDAI	USA	Veracruz/ix55(EN)		2007-2013	Immobiliser	1. Read live data 2. program keys 3. Engine ECM neutral 4. Security machine ECM neutral
HYUNDAI	USA	Veracruz/ix55(EN)		2007-2013	Remote control system	2. Remote control matching
HYUNDAI	USA	Veracruz/ix55(EN)		2007-2013	Smart key system	1. Live data 2. Program smart keys 3. ECM neutral 4. SMK neutral 5. MSL neutral
HYUNDAI	USA	XG(XG)		2001-2005	Immobiliser	1. Change password 2. Add key 3. Clear the key 4. neutral mode 5. Anti theft reset