

<b>Brand</b>	<b>Vehicle Type</b>	<b>ECU Model</b>	<b>Year</b>	<b>System</b>	<b>Function</b>
INFINITI	All	Type 1(4 pincode)	KWP200	Immobiliser system	1.Program keys
INFINITI	All	Type 2(4 pincode)	CANBUS	Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		Type 1(12 pincode)	KWP200	Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		Type 2(12 pincode)	CANBUS	Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		Type 3(20 pincode)		Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		Help		Immobiliser system	
INFINITI		Read bcm code and Release steering lock		Immobiliser system	1.Read BCM code 2.Release steering lock
INFINITI		4 pincode - type 1		Immobiliser system	1.Fault codes 2.Erase DTC 3.Program keys
INFINITI		4 pincode - type 2		Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		12 pincode - type 1		Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		12 pincode - type 2		Immobiliser system	1.Erase DTC 2.Program keys
INFINITI		20 pincode - type 2		Immobiliser system	1.Program keys
INFINITI	All	4 pincode - type 1		Smart key system	1.Program smart keys
INFINITI	All	4 pincode - type 2		Smart key system	1.Erase DTC 2.Program keys
INFINITI	All	4 pincode - type 3		Smart key system	1.Program smart keys 2.Erase all smart keys 3.Program steering lock
INFINITI	All	4 pincode - type 4		Smart key system	1.Program smart keys 2.Erase all smart keys
INFINITI	All	4 pincode - type 5		Smart key system	1.Read BCM code 2.Release steering lock 3.Program smart keys
INFINITI	All	4 pincode - type 6		Smart key system	1.Read BCM code 2.Release steering lock 3.Program smart keys
INFINITI		12 pincode		Smart key system	1.Read number of keys 2.Program keys 3.Program remote 4.Erase remotes
INFINITI		20 pincode - type1		Smart key system	1.Program smart keys

INFINITI		20 pincode - type2		Smart key system	1.Program smart keys 2.Replace engine ECU
INFINITI	Teana		-2012	Body System(BCM)	1.Erase DTC 2.Program keys
INFINITI	Teana		-2012	Smart key system	1.Erase DTC 2.Program keys
INFINITI	Teana		2013-	Smart key system	1.Program smart keys 2.Replace engine ECU
INFINITI	New March			Smart key system	1.Read BCM code 2.Release steering lock 3.Program smart keys
INFINITI	New Sunny			Smart key system	1.Read BCM code 2.Release steering lock 3.Program smart keys
INFINITI	New Tiida			Smart key system	1.Read BCM code 2.Release steering lock 3.Program smart keys
INFINITI	Altima Hybrid		07-11	Smart key system	1.Release steering lock 2.Program smart keys
INFINITI	LANNIA		2015-	Smart key system	1.Read BCM code 2.Release steering lock 3.Program smart keys
INFINITI	Qichen			Body System(BCM)	1.Read BCM code 2.Release steering lock
INFINITI	Qichen			Immobiliser system	1.Fault codes 2.Erase DTC 3.Program keys
INFINITI	Qichen			Immobiliser system	1.Erase DTC 2.Program keys
INFINITI	New Sylphy			Without Smart key system	1.Erase DTC 2.Program keys
INFINITI	New Sylphy			With Smart key system	1.Read BCM code 2.Release steering lock
INFINITI	New X-Trail			With Smart key system	1.Program smart keys
INFINITI	New X-Trail			Without Smart key system	1.Program keys
INFINITI	Murano			Smart key system	1.Program smart keys 2.Replace engine ECU
INFINITI	Qashqai			With Smart key system	1.Program smart keys
INFINITI	Qashqai			Without Smart key system	1.Program keys
INFINITI	Qashqai			Without Smart key system	1.Erase DTC 2.Program keys
INFINITI	JX35			Smart key system	1.Program smart keys 2.Replace engine ECU
INFINITI	Q50			Smart key system	1.Program smart keys 2.Replace engine ECU

INFINITI	QX60			Smart key system	1.Program smart keys 2.Replace engine ECU
INFINITI	Cima			Smart key system	1.Program smart keys 2.Replace engine ECU
INFINITI		type 1		Remote	1.Program a remote key 2.Erase remote keys
INFINITI		type 2		Remote	1.Program remote 2.Erase remotes