

N NEXPEAK K1 Key program Function List V10.10

Brand	ECU Type	System	Function
Lexus	Type 1	Remote	1. Program remote 2. Erase remote
Lexus	Type 2	Remote	1. Program remote 2. Erase remote
Lexus	Type 3	Remote	1. Program remote
Lexus	Type 1(4C)	Immobiliser	1. Add a master key 2. Add a vice key 3. Erase keys 4. Erase DTC
Lexus	Type 2(4D 67/68)	Immobiliser	1. Add a key 2. Erase keys 3. Reset immobiliser 4. Replace engine ECU
Lexus	Type 3(4D 72 G)	Immobiliser	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Lexus	Type 4(8E H)	Immobiliser	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Lexus	Type 5(Avanza)	Immobiliser	1. Add a key
Lexus	Type 6	Immobiliser	1. Add master key 2. Add valet key 3. Erase keys
Lexus	Type 7(86)	Immobiliser	1. Read Keys Number 2. Programme Key 3. Erase Keys 4. Programme Remote 5. Erase Remotes
Lexus	Type 8	Immobiliser	1. Add a key
Lexus	Type 1	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart key ECU
Lexus	Type 2	Smart key system	1. Program smart keys 2. Program remote 3. Reset immobiliser ECU
Lexus	Type 3	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart keys 4. Program smart keys after recharging 5. ID certification box and Steering lock synchronization 6. Remote control engine starting

Lexus	Type 4	Smart key system	<ol style="list-style-type: none">1. Add a smart key2. Erase smart keys3. Reset smart keys4. Program smart keys after recharging5. ID certification box and Sterring lock synchronization6. Remote control engine starting
-------	--------	------------------	---