NEXPEAK K1 SUBARU Function list

Vehicle systems covered

System	DTC		Data List	Active Test	Special Func
Engine	\checkmark				
AT	\checkmark				\checkmark
ABS	\checkmark				
EPS	\checkmark				
SRS	\checkmark				
TPMS	\checkmark				
IUM	\checkmark				
ASS	\checkmark				
ACS	\checkmark				
CCS	\checkmark				
Impact Sensor	\checkmark		\checkmark		\checkmark
Automatic Light and Wiper	γ	١		λ	\checkmark
Keyless access system					\checkmark
CAN System	\checkmark				
Occupant Detection System	\checkmark				
Brake Vacuum Pump System					

Vehicle Special Function covered			
System	Special Function		
Engine	Dealer Check Mode Procedure		
Engine	System Operation Check Mode		
Engine	Diagnosis Results		
Engine	Cancle Code(s) Display		
Engine	DPF maintenance		
Engine	Oil maintenance mode		
Engine	Maintenance at the time of ECM replacement		
Engine	Injector or Engine Replacement		
Engine	ECM Replacement		
Engine	Injector Code Display		
Engine	Fuel pump duty learning		
Engine	Fuel injector injection amount learning		
Engine	EGR valve opening angle learning		
AT	Fuction Check Sequence		
AT	Dealer Check Mode Procedure		
AT	AT learning mode		
AT	Oil inspection mode		
AT	Rear differential inspection mode		
AT	AWD ON/OFF switching mode		
AT	Clear Memories 2		
ABS	Freeze Frame		
ABS	Fuction Check Sequence		
TPMS	Transmitter ID regist confirm		
IUM	ECUCustomize		
IUM	Fun_checkmenu		
IUM	Keyless ID Regist		
ASS	CompulsoryHeightControl		
ACS	Variable compressor break-in drive		

ACS	Freeze Frame	
Impact Sensor	SensitivityAdjustmentMode	
Automatic Light and Wiper	Sensor initial setting	
Keyless access system	Collation ECM output check	
Keyless access system	Keyless access system check	
Keyless access system	Power supply ECU output check	
Keyless access system	Keyless ID Regist.	
Occupant Detection System	Re-zeroing	
Brake Vacuum Pump System	Function Check Sequence	
	Maintenance Reset	